

Key Fob Pairing Instructions

1. Enter Pairing Mode

Place a strong magnet over the “Learn” position (near the LED window) on the wireless receiver. When the LED turns solid red, remove the magnet and keep it at least 12 inches (30 cm) away from the receiver.

2. Pair the Key Fob

Within 10 seconds of the LED turning solid red, press and release any button on the key fob. The receiver’s LED will turn green to confirm that the key fob has been successfully paired.



Troubleshooting

- **LED does not turn red:**
 - Ensure the magnet used is strong – a holding force of at least 5 lbs. is recommended.
 - Place the magnet along the side of the enclosure adjacent to the “Learn” position.
 - Move the magnet slowly along the edge until the LED light turns solid red.
- **LED does not turn green:**
 - Confirm that the key fob is transmitting. The key fob’s status LED should blink rapidly when a button is pressed.
 - Check that the battery is properly installed and not depleted.
 - Verify that the receiver has not reached its maximum number of paired key fobs.
- **Receiver has reached its pairing limit:**
 - Hold a strong magnet on the receiver’s Learn position until the solid red LED turns off.
 - This clears all paired key fobs. Then, repeat the pairing steps above.

Rowe Electronics, Inc.

339 Hakes Drive, Norwalk, IA 50211

Contact us at 515-981-5504 or info@rowe-electronics.com